

FLYWHEEL POWER TAKE-OFFS

FLYWHEEL POWER TAKE-OFFS

STEEL

Precision drilled and tapped to receive 1310 or 1350 drive lines. Bolts to the flywheel or flexplate, bolt pack included. To determine drive line series, measure the registration (see photo at right).



1310 Series Male Pilot - 2-3/8"

1350 Series Male Pilot - 2-3/4"

1310 DRIVE LINE SERIES

Drive Line	Catalog No.	Item No.
Chevy - Automatic	32710	793-E
Chevy - Standard	32710	793-F
Chrysler 6 Bolt	32710	793-G
Chrysler 8 Bolt	32710	793-H
272-312 Ford	32710	793-I
289-351 Ford	32710	793-J
331-460 Ford	32710	793-K
65 Olds (425 c.i.)	32710	793-L
66-81 Olds (350-455 c.i.)	32710	793-M*
59-64 Pontiac	32710	793-N
65-88 Pontiac	32710	793-O
Chevy (87 & newer) -Auto	32710	793-P
Chevy (87 & newer) - Std	32710	793-Q
Chevy (81-86 V-6) - Auto	32710	793-R
Chevy (81-86 V-6) - Std	32710	793-S

*SPECIFY IF STANDARD OR AUTOMATIC

1350 DRIVE LINE SERIES

Drive Line	Catalog No.	Item No.
49-64 Cad/Oldsmobile	32750	796-D
Chevy - Automatic	32750	796-E
Chevy - Standard	32750	796-F
Chrysler 6 Bolt	32750	796-G
Chrysler 8 Bolt	32750	796-H
Ford 2.3 Liter	32750	796-I
289-351 Ford	32750	796-J
331-460 Ford	32750	796-K
66-81 Olds (350-455c.i.)*	32750	796-M*
59-64 Pontiac	32750	796-N
65-88 Pontiac	32750	796-O
Chevy (87 & newer) -Auto	32750	796-P
Chevy (87 & newer) - Std	32750	796-Q
Chevy LT1 - Automatic	32750	796-T

*SPECIFY IF STANDARD OR AUTOMATIC


CHEVROLET 1/2" SPACERS FOR AUTOMATIC FLYWHEEL FOR REVERSE ENTRY STARTERS

	Catalog No.	Item No.
Big Block Chevrolet	32710	793
Chevrolet (87)	32750	796

BORG WARNER POWER TAKE-OFF

STEEL

Made exclusively to fit Borg Warner Velvet Drive transmission for model 71 and 72 gears. Flange adapter is drilled and tapped to receive the 1310 or 1350 drive line series.

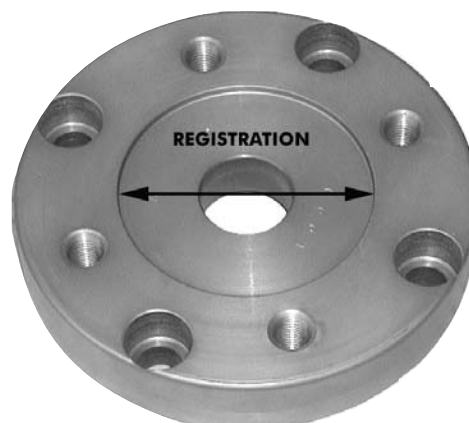

Drive Line Series	Catalog No.	Item No.
1310 for 71 Gear	32711	794
1350 for 71 Gear	32751	797
1310 for 72 Gear	32712	795
1350 for 72 Gear	32752	798